

Code	Switch Description	Body Colour	Knob Colour	Quantity
PK 101	SPST W/O LIGHT	Black	Red	100
PK 102	SPST W/O LIGHT	Black	Black	100
PK 103	SPST W/O LIGHT	White	Red	100
PK 104	SPST W/O LIGHT	White	White	100
PK 105	SPDT W/O LIGHT	Black	Red	100
PK 106	SPDT W/O LIGHT	Black	Black	100
PK 107	SPDT W/O LIGHT	White	Red	100
PK 108	SPDT W/O LIGHT	White	White	100
PK 109	DPST W/O LIGHT	Black	Red	50
PK 110	DPST W/O LIGHT	Black	Black	50
PK 111	DPST W/O LIGHT	White	Red	50
PK 112	DPST W/O LIGHT	White	White	50
PK 113	DPDT W/O LIGHT	Black	Red	50
PK 114	DPDT W/O LIGHT	Black	Black	50
PK 115	DPDT W/O LIGHT	White	Red	50
PK 116	DPDT W/O LIGHT	White	White	50
PK 135	SPDT CENTRE OFF	Black	Red	100
PK 136	SPDT CENTRE OFF (SPRING)	Black	Red	100
PK 137	SPST LIGHT	Black	Red	100
PK 138	SPST LIGHT	White	Red	100
PK 139	SPST LIGHT	Black	Yellow	100
PK 140	SPST LIGHT	White	Yellow	100
PK 141	SPST LIGHT	Black	Green	100

Code	Switch Description	Body Colour	Knob Colour	Quantity
PK 142	SPST LIGHT	White	Green	100
PK 143	DPST LIGHT	Black	Red	50
PK 144	DPST LIGHT	White	Red	50
PK 145	DPST LIGHT	Black	Yellow	50
PK 146	DPST LIGHT	White	Yellow	50
PK 147	DPST LIGHT	Black	Green	50
PK 148	DPST LIGHT	White	Green	50
PK 149	DPDT LIGHT	Black	Red	50
PK 150	DPDT LIGHT	White	Red	50
PK 151	DPDT LIGHT	Black	Yellow	50
PK 152	DPDT LIGHT	White	Yellow	50
PK 153	DPDT LIGHT	Black	Green	50
PK 154	DPDT LIGHT	White	Green	50
PK 157	PUSH TO ON ROUND (MINI) (MIX)			200
PK 161	PUSH TO ON SQUARE (MIX)			100
PK 162	PUSH TO ON ROUND	Black	Red	100
PK 163	PUSH TO ON ROUND BAKELITE	Black	Red	100
PK 164	PUSH TO OFF ROUND BAKELITE	Black	Green	100
PK 165	PUSH TO ON OFF ROUND (MIX)			100
PK 166	PUSH TO ON OFF SQUARE (MIX)			100
PK 188	RS2 W/O LIGHT (SPL)	Black	Red	100
PK 189	RS2 W/O LIGHT (SPL)	Black	Black	100
PK 190	RS2 LIGHT (SPL)	Black	Red	100
PK 191	RS2 LIGHT (SPL)	Black	Black	100